




VALTRA

S232, S233, S253, S262, S293,
S322, S323, S352, S353

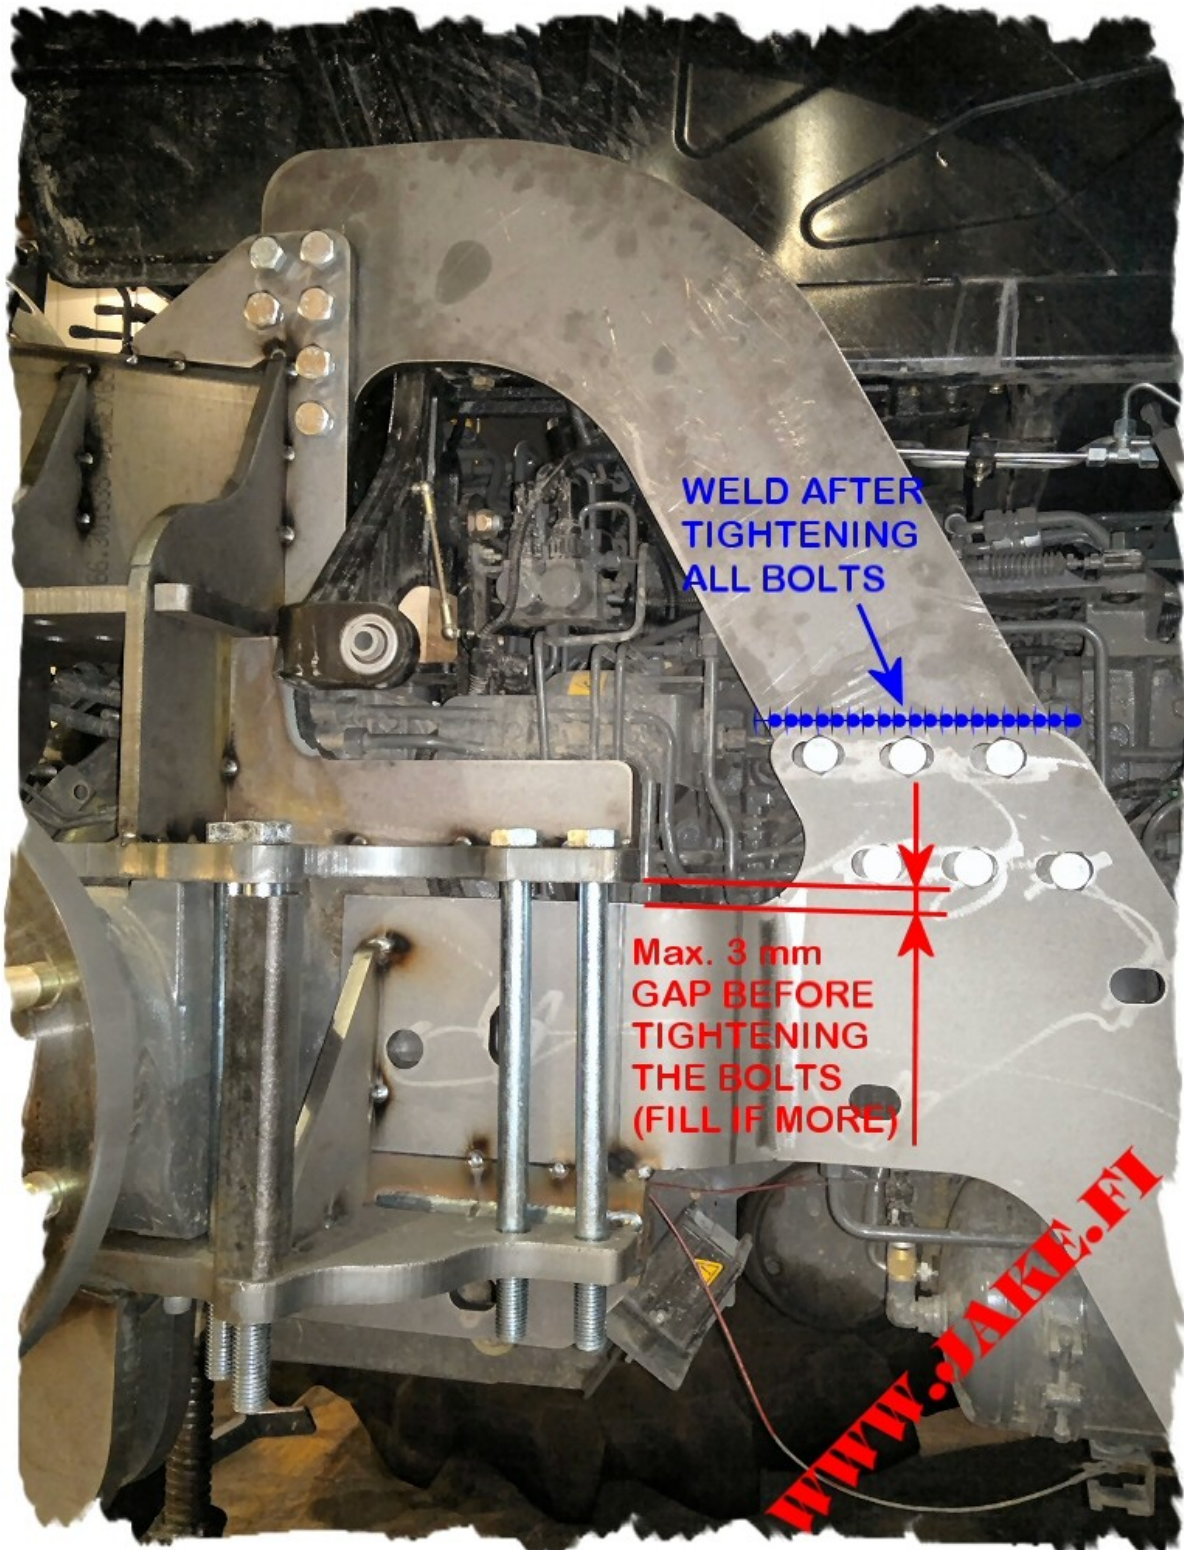

WELD AFTER
TIGHTENING
ALL BOLTS

Max. 3 mm
GAP BEFORE
TIGHTENING
THE BOLTS
(FILL IF MORE)

WWW.JAKE.FI